


**CROUSE-HINDS COMPANY**  
**DISTRIBUTION EQUIPMENT DIVISION**  
**CERRITOS, CA. 90701**

TO ORDER HUBS, SPECIFY:  
 RX250(2 1/2") RX150(1 1/2")  
 RX200(2") RX125(1 1/4")

FILE E27100  
 JA112CY MODEL G SURFACE  
 JA112CW MODEL G SEMI-FLUSH  
 RAINPROOF-BOTTOM FEED ONLY

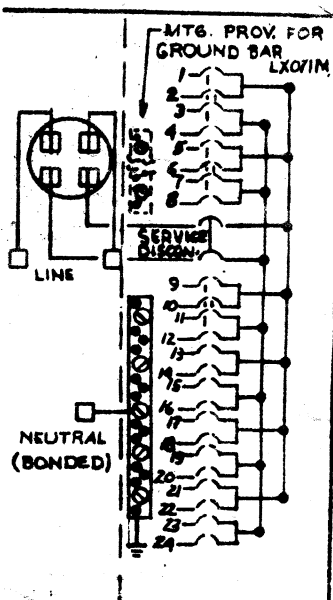

RATING: SEE MAIN BREAKER HANDLE. 103W 120/240 VAC 125 AMP. WITH #1/0 THW CU WIRE FROM METER TO MAIN OR 100 AMP. WITH #1 THW CU WIRE FACTORY SUPPLIED. TO CONVERT FROM 100 TO 125A. MAIN, ORDER WIRE KIT CAT. NO. JA125W AND CROUSE-HINDS MP2125 OR EP212 BREAKER OR BRYANT BR2125. TORQUE CONNECTIONS 50 IN-LBS.

METER SOCKET COMPONENT UX008, FILE E59396, RATING: 125AMP. (100 AMP. CONTINUOUS)

PANEL HAS SHORT CIRCUIT CURRENT RATING OF 10,000 RMS SYM. AMP. AT 240 VOLTS IF THE FOLLOWING CONDITIONS ARE MET:

1. INTERNAL MAIN IS A CROUSE-HINDS STYLE MP OR EP212 BREAKER RATED 10,000 AIC.
  2. BRANCH BREAKERS ARE CROUSE-HINDS STYLE MP, MM AND EP OR BRYANT BRD.
- REPLACEMENT BREAKERS MUST BE OF THE SAME TYPE AND RATING.

C/B STAB LEGEND:



ACCEPTS CROUSE-HINDS STYLE MP, EP, BRYANT GFCB, ITE QF1-B, QPGF PLUS CROUSE-HINDS CLASS CTL STYLE EP, MP, MM AND BRYANT BRD.

DIAGRAM INDICATES MAX. NO. OF INSTALLED CIRCUIT BREAKER POLES.

TRIP POSITION FOR BREAKER HANDLE IS BETWEEN "ON" AND "OFF". TO RESTORE SERVICE, MOVE HANDLE TO FULL "OFF", THEN "ON".

LINE ENTRY PROV. CONDUIT WITH LOCKNUT & BUSHING OR FOR "RX" HUB. FOR CONDUIT WITH LOCKNUT & BUSHING OF 1 1/2" SIZE. ORDER "RXCA"; 2" ORDER "RXCA2".

BUILDING PAPER OR FLASHING MUST BE OVER FRONT OF FLANGES ON SEMI-FLUSH DEVICE.

TERMINALS RANGE:  
 USE #12 CU WIRE  
 □ #2/0-6 AWG  
 ● (1) #1/0-14 AWG OR \*(2OR3) #10-14 AWG TORQUE 50 IN-LBS.  
 ● (1) #6-14 AWG OR \*(2) #10-14 AWG TORQUE 35 IN-LBS.  
 \*GROUND BAR ONLY

3100301 REV. 12

DIRECTORY			
1		9	17
2		10	18
3		11	19
4		12	20
5		13	21
6		14	22
7		15	23
8		16	24